



PROGRAM DESCRIPTION / DESCRIPTION DU PROGRAMME

Affichage horloge (exemple extrait du manuel)

initialisation :

- secondes à l'adresse 0024, [AD]0024[DA]ss+
- minutes à l'adresse 0025, [AD]0025[DA]mm+
- heure à l'adresse 0026 [AD]0026[DA]hh+
[AD]0200 [GO]

```

0200          * = $0200          0219  85 29          STA $29
0200  F8      CLK  SED          021B  94 24      CL2  STY $24,X
0201  18          CLC          021D  94 F9          STY $F9,X
0202  A2 00      LDX #$00      021F  E8          INX
0204  A9 01      LDA #$01      0220  E0 03          CPX #$03
0206  85 29      STA $29      0222  D0 E4          BNE $0208
0208  A0 00      CL1 LDY #$00  0224  A9 45          LDA #$45
020A  A5 29      LDA $29      0226  85 28          STA $28
020C  75 24      ADC $24,X     0228  20 1F 1F CL3 JSR $1F1F
020E  95 24      STA $24,X     022B  C6 28          DEC $28
0210  DD 32 02   CMP $0232,X   022D  D0 F9          BNE $0228
0213  F0 06      BEQ $021B     022F  4C 00 02      JMP $0200
0215  B4 24      LDY $24,X     0232  60          RTS
0217  A9 00      LDA #$00      0233  60          RTS

```

```

0200: F8 18 A2 00 A9 01 85 29 A0 00 A5 29 75 24 95 24
0210: DD 32 02 F0 06 B4 24 A9 00 85 29 94 24 94 F9 E8
0220: E0 03 D0 E4 A9 45 85 28 20 1F 1F C6 28 D0 F9 4C
0230: 00 02 60 60 00

```

```

;180200F818A200A9018529A000A52975249524DD3202F006B424A9096C
;180218008529942494F9E8E003D0E4A9458528201F1FC628D0F94C0BA0
;0000020002

```